


↑  
**EDGE**

⊕  
**DRILL  
HOLE**

**LDCO800  
BBU Battery Backup Unit  
Retrofit Mounting Template**

**DRILL  
HOLE**

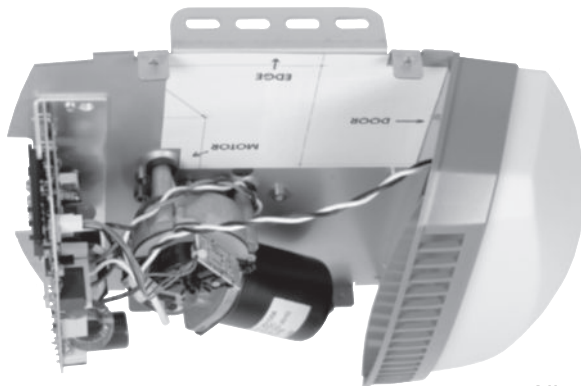

**DOOR** →

**MOTOR**

**DRILL  
HOLE**



1. Align template inside operator
2. Drill three holes for mounting BBU
3. Discard template
4. Mount BBU with #6 screws with locking hardware